

## Installation Instructions

### For FITOK Tube Fittings up to 1 in. (25mm) O.D.

#### ■ Installation

1. Insert the tube into the tube fitting. Make sure the tubing rests firmly on the shoulder of the fitting body. Finger tight the nut. (Fig. 1)

#### *For High-Pressure Applications and High Safety-Factor Systems:*

*Further tighten the nut with a wrench until the tubing could not be turned by hand or moved axially in the fitting before Step 2 and Step 3.*

2. Mark the nut at 6 o'clock position. (Fig. 2)

3. For tube fittings below or equal to 3/16" (4mm) O.D., tighten the nut 3/4 turn to 3 o'clock position, while holding the fitting body steady. For tube fittings above 3/16" (4mm) O.D., tighten the nut with 1-1/4 turns to 9 o'clock position. (Fig.3)

# FITOK

#### ■ Gaugeability

For initial installation, the FITOK Gap Inspection Gauge helps to judge whether the fitting has been sufficiently tightened by trying to enter the FITOK gap inspection gauge into the gap between the nut and body. (Fig. 4)

- ⊙ If the gauge could not enter the gap, the fitting is sufficiently tightened.
- ⊙ If the gauge enters into the gap, additional tightening is required.

#### ■ Reassembly

The FITOK tube fittings can be disassembled and reassembled for multiple times. Prior to disassembly, make sure to mark a straight line along the tubing, the nut and the fitting body to ensure the reassembled fittings are properly tightened. (Fig. 5)

1. Insert tubing with the preset ferrules into the fitting body until the front ferrule seats.
2. While holding the fitting body steady, rotate the nut with a wrench back to the original position as indicated by the marks on the tubing and the fitting body. At this point, there shall be a significant increase in resistance. (Fig. 6)
3. Tighten the nut slightly further with a wrench so as to complete the reassembly.

▲ The FITOK Gap Inspection Gauge is not applicable to reassembled fittings.



Fig. 1

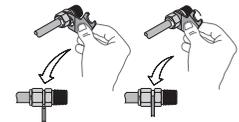


Fig. 4



Fig. 2



Fig. 5

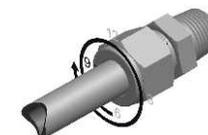


Fig. 3



Fig. 6

## Presetter Tool

1. Install the nut and ferrules onto the presetter tool.
2. Insert tubing into the presetter tool, make sure the tube rests firmly on the shoulder of the presetter tool, then rotate the nut finger-tight.
3. Assemble the fitting as per installation instructions. Fig. 7.
4. Loosen the nut and insert the tubing with preset ferrules into the fitting body. Fig. 8.
5. Reassemble as stated in the reassembly instructions. Fig. 9.

#### ■ Plugs and Port Connectors

1. While holding the fitting body steady, tighten the plug and the machined ferrule end of port connector one-quarter turn from the finger-tight position. Fig. 10 & Fig. 11.

For 1/16, 1/8, and 3/16 in.; 2, 3, and 4 mm tube fittings, tighten the plug and the machined ferrule end of port connector one-eighth turn. For over 1 in. and over 25 mm tube fittings, tighten the plug and the machined ferrule end of port connector one-quarter turn.

2. For the tube adapter end of port connector, assemble as per installation instructions. Fig. 12.



Fig. 7



Fig. 8



Fig. 9



Fig. 11



Fig. 10



Fig. 12

#### ■ Reassembly of Plugs and Port Connectors

1. Make subsequent connections by slightly tightening with a wrench after snugging the nut by hand.
2. For the tube adapter end of port connector, reassemble as stated in the reassembly instructions.

Over 1 in. (25 mm) sizes require use of a hydraulic pre-essetting unit to preset the ferrules onto the tubing.

#### ◀ Safety Precautions

1. Do not assemble and tighten fittings when system is pressurized.
2. Do not bleed system by loosening fitting nut or fitting plug.
3. Make sure that the tubing rests firmly on the shoulder of the tube fitting body before tightening the nut.
4. Always use proper thread sealants or lubricants on tapered pipe thread.
5. Never turn fitting body. Instead, hold the body and turn the nut.

6. Metal tubing material should be softer than fitting material.
7. When tubing and fittings are made of the same material, tubing must be fully annealed.
8. Extremes of wall thickness should always be checked against the suggested minimum and maximum wall thickness limitations.
9. Always leave enough length of straight tube between the tube bend and the fitting.
10. Always use an insert with extremely soft or pliable plastic tubing.
11. Surface finish is very important to proper sealing, particularly in gas service.
12. Tubing that is oval and will not easily fit through fitting nuts, ferrules, and bodies should never be forced into the fitting.

#### FITOK Group

**FITOK GmbH**  
Sprendlinger Landstr. 115, 63069 Offenbach am Main, Germany  
Tel.: +49 69 8900 4498 Fax: +49 69 8900 4495

**FITOK, Inc.**  
13843 North Promenade Blvd., Suite 750, Stafford, Texas 77477, USA  
Tel.: +1 281 888 0077 Fax: +1 281 582 4051

**FITOK (Wuhan) Incorporated**  
Zhongbai Yangluo Industrial Park, Hanshi Road, Xinzhou District, Wuhan, Hubei Province, 430415, China  
Tel.: +86 27 8983 8988 Fax: +86 27 8983 8980

**FITOK (Shenzhen) Incorporated**  
No.164 Xinqiu Village, Tiantou Community, Shijing Street, Pingshan District, Shenzhen 518118, China  
Tel.: +86 755 2803 2500 Fax: +86 755 2803 2619

**FITOK (Suzhou) Metal Products Co., Ltd.**  
No. 29 Changsheng Road, Yangyuan Industrial Park, Xinzhuang Town, Changshu, Jiangsu 215562, China  
Tel.: +86 512 5247 9001 Fax: +86 512 5247 9002

**FITOK Middle East Oil Equipment Trading LLC**  
Makateb Building, P.O. Box 185412, Airport Road, Deira, Dubai, UAE  
Tel.: +971 4 2959 853 Fax: +971 4 2959 854

info@fitokgroup.com  
www.fitokgroup.com

